U3500 DATA SHEET



ZHEJIANG UNIU-NE Technology CO., LTD 浙江宇力微新能源科技有限公司



U3500 Data Sheet

V 3.0

版权归浙江宇力微新能源科技有限公司

120V Input, Switching Current Limit Step-Down Converter General Description Key Features

The U3500 is a high-voltage, step-down, switching regulator that drives External power MOSFET with a current limit of 10A, typically. The wide 10V to 120V input range accommodates a variety of step-down applications, making it ideal for automotive, industry, and lighting applications. Hysteretic voltage-mode control is employed for very fast response. UNI's proprietary feedback control scheme minimizes the number of required external components.

The switching frequency is 70KHz, allowing for small component size. Thermal shutdown and short-circuit shutdown (SCS) provide reliable and fault-tolerant operations. Low quiescent current allows the U3500 to be used in battery-powered applications.

The U3500 is available in a ESOP-8 package with an exposed pad.


Wide 10V to 120V Input Range

- DC-DC 12V/10A Typical Switching Current Application
- Hysteretic Control: No Compensation
- 70KHz Switching Frequency
- PWM Control Input for step-down Application
- Short-Circuit Shutdown (SCS) with Integrated IC
- Low Quiescent Current
- Thermal Shutdown
- Available in a ESOP-8 Package with an Exposed Pad

Applications

- Scooters, E-Bike Control Power Supplies
- Solar Energy Systems
- Automotive System Power
- Industrial Power Supplies
- High-Power LED Drivers

Typical Application

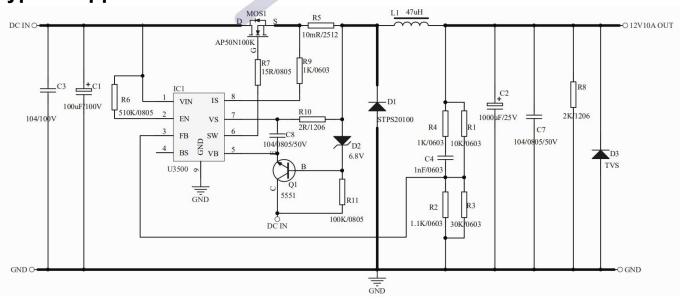




Ordering Information

Part Number	Package	Vo	VIN MAX	Load Current
U3500	ESOP-8	>2V	120V	Io<=10A

Pin Description

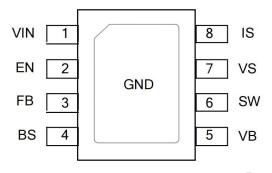

SOP-8 EP

Pin Functions

SOP-8 EP Pin #	Name	Description		
1	VIN	Input supply. VIN supplies power to all of the internal control circuitries, both BST regulators, and the high-side switch. A decoupling capacitor to ground must be placed close to VIN to minimizes witching spikes.		
2	EN	Enable input. Pull EN below the specified threshold to shut down the U3500. Pull EN above the specified threshold or leave EN floating to enable the U3500.		
3	FB	Feedback. FB is the input to the voltage hysteretic comparators. The average FB voltage is maintained at 200mV by loop regulation.		
4	BS	Bootstrap.Connected to a bootstrap diode 1N4148.		
5	VB	Boot. BST is the positive power supply for the internal, floating, high-side MOSFET driver. Connect a bypass capacitor between BST and SW.		
6	sw	Switch node. SW is the output,drives External power MOSFET		
7	VS	Switch source.Upper drive low potential		
8	IS	Current detection. Current Sensing Input		
9	EP-GND	Ground. GND should beplaced asclose to the output capacitor aspossible to avoid the high-currents witch paths. Connect the exposed padto GND plane for optimal thermal performance.		

Operation

Hysteresis Current Control with Adaptive Threshold Adjustment

The U3500 operates in a hysteretic voltage-control mode to regulate the output voltage. FB is connected to the tap of a resistor divider, which determines the output voltage. The power MOSFET is turned on when the FB voltage (V_{FB}) rises to FBon and remains on until V_{FB} rises to FBoff. The power MOSFET is turned off when V_{FB} drops to FBoff and remains off until V_{FB} falls to FBon. The two thresholds of FBon and FBoff are adjusted adaptively to compensate for all the circuit delays, so the output voltage is regulated with an average 1.25V value at FB.

Enable (EN) Control

The U3500 has a dedicated enable control pin (EN) with positive logic. Its falling threshold is 2.5V, and its rising threshold is 2.8V.

When EN is pulled up to about 3V by an internal current source, so it is enabled.

Floating Driver and Bootstrap Charging

The floating power MOSFET driver is powered by an external bootstrap capacitor. This floating driver has its own under-voltage lockout (UVLO) protection. The UVLO rising threshold is 10V with a threshold error of 0.2V. The bootstrap capacitor is charged and regulated to about 5V by the dedicated internal bootstrap regulator.

If the internal circuit does not have sufficient voltage, and the bootstrap capacitor is not sufficiently charged, extra external circuitry can be used to ensure that the bootstrap voltage is in the normal operating region. Refer to the External Bootstrap Diode section for more details.

Under-Voltage Lockout (UVLO)

Under-voltage lockout (UVLO) is implemented to protect the chip from operating at an insufficient supply voltage. The UVLO rising threshold is about 10V, while its falling threshold is a consistent 9.5V.

Fast charging Function for USB Applications

Because the FB reference of the U3500 is very flexible, it is recommended to use the U3500 for USB Fast charging Applications by connecting the current sense resistor between FB and GND.

Thermal Shutdown

Thermal shutdown is implemented to prevent the chip from operating at exceedingly high temperatures. When the silicon die temperature is higher than its upper threshold, the entire chip shuts down. When the temperature is lower than its lower threshold, the chip is enabled again.

Output Short Shutdown Protection

The output voltage is well-regulated when VFB is around 1.25V. If the output is pulled Shutdown in over-current protection (OCSP) or is shorted to GND directly, V_{FB} is low, Until the power MOSFET is turned on again. The U3500 regards the low V_{FB} as a failure. The power MOSFET is pulled Shutdown if the failure time is longer .

The power MOSFET current is also accurately sensed via a current sense MOSFET. If the current is over the current limit, the IC is is pulled Shutdown. This offers extra protection under output- short conditions.



Application Information

Setting the Output Voltage

The output voltage (V_{OUT}) is set by a resistor divider (R1 and R2) (see the Typical Application on page 1). To achieve good noise immunity and low power loss, R2 is recommended to be in the range of $1k\Omega$ to $50k\Omega$. R1 can then be determined with Equation (1):

$$R1 = \frac{V_{OUT} - V_{FB}}{V_{FR}} \times R2 \tag{1}$$

Where V_{FB} is 1.25V, typically.

Output Capacitor and Frequency Setting

The output capacitor (C_{OUT}) is necessary for achieving a smooth output voltage. The ESR of the capacitor should be sufficiently large compared to the capacitance; otherwise, the system may behave in an unexpected way, and the current ripple may be very high.V_{FB} changes from 1.22V to 1.28V when the power MOSFET switches on. To charge the capacitor and generate 1.28V at FB, the system needs ESR and some inductor current. For example, for a 5V V_{OUT}, if the forward capacitor is $0.1\mu F$, the suggested ESR range of the output capacitor is $100m\Omega$ to $250m\Omega$. Tantalum or aluminum electrolytic capacitors with a small ceramic capacitor are recommended.

A forward capacitor across R1 is recommended when the output capacitor is tantalum or aluminum electrolytic, which can set the desired frequency if the output capacitor and ESR cannot be changed. The forward capacitor can reduce the output voltage ripple.

In some application, simply a forward capacitor may not get proper frequency, then we can add a forward resistor in series with the forward capacitor or even more add a ceramic on the output.

Selecting the Inductor

The inductor (L) is required to convert the switching voltage to a smooth current to the load. Although the output current is low, it is

recommended that the inductor current be continuous in each switching period to prevent reaching the current limit. Calculate the inductor value with Equation (2):

$$L = \frac{(V_{IN} - V_{OUT}) \times V_{OUT}}{F_{SW} \times I_{OUT} \times V_{IN} \times K}$$
 (2)

Where K is a coefficient of about 0. 15 ~ 0.85

Output Rectifier Diode

The output rectifier diode supplies current to the inductor when the high-side switch is off. To reduce losses due to the diode forward voltage and recovery times, use a Schottky diode. The average current through the diode can be approximated with Equation (3):

$$I_D = I_{OUT} \times (1 - \frac{V_{OUT}}{V_{IN}}) \tag{3}$$

Choose a diode with a maximum reverse voltage rating greater than the maximum input voltage and a current rating is greater than the average diode current.

Input Capacitor (C_{IN})

The input current to the step-down converter is discontinuous and therefore requires a capacitor to supply AC current to the step-down converter while maintaining the DC input voltage. Use low ESR capacitors for the best performance, especially under high switching frequency applications.

The RMS current through the input capacitor (4):

$$I_{IN_AC} = I_{OUT} \times \sqrt{\frac{V_{OUT}}{V_{IN}} \times (1 - \frac{V_{OUT}}{V_{IN}})}$$
 (4)

With low ESR capacitors, the input voltage ripple can be estimated with Equation (5):

$$\Delta V_{IN} = \frac{I_{OUT} \times V_{OUT}}{F_{SW} \times C_{IN} \times V_{IN}} \times (1 - \frac{V_{OUT}}{V_{IN}}) \quad (5)$$

Choose an input capacitor with enough RMS current rating and enough capacitance for small input voltage ripples.

When electrolytic or tantalum capacitors are applied, a small, high-quality ceramic capacitor (i.e.: 0. 1μ F) should be placed as close to the IC as possible.



External Bootstrap Diode

An external bootstrap diode may enhance the efficiency of the converter (see Figure 2). An external VB diode is recommended from the BS supply to VB in the following cases:

- There is a 5V rail available in the system
- IO is greater than 1A

This diode is also recommended for high duty cycle operations (when V_{OUT} / V_{IN} > 65%) and very high frequency applications.

The bootstrap diode can be a low-cost one, such as FR107.

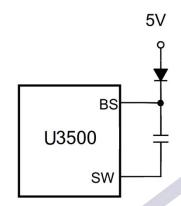


Figure 2: External Bootstrap Diode

PCB Layout Guidelines


Efficient PCB layout is critical for stable operation. For best results, refer to Figure 3 and follow the guidelines below.

- 1. Place the input decoupling capacitor, catch diode, and the U3500 (VIN, SW, and PGND) as close to each other as possible.
- Keep the power traces very short and fairly wide, especially for the SW node.
 This can help greatly reduce voltage spikes on the SW node and lower the EMI noise level.
- Run the feedback trace as far from the inductor and noisy power traces (like the SW node) as possible.
- 4. Place thermal vias with 15mil barrel diameter and 40mil pitch (distance between the centers) under the exposed pad to improve thermal conduction.




Typical Application Circuit

APP1: Vout =12.5V, Iout = 3A

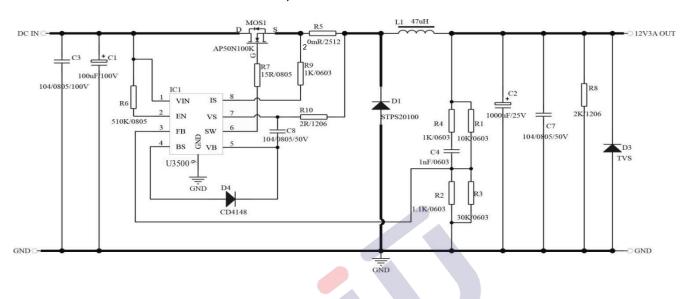

APP2:V_{OUT} =12.5**V**, **I**_{OUT} = 10**A**

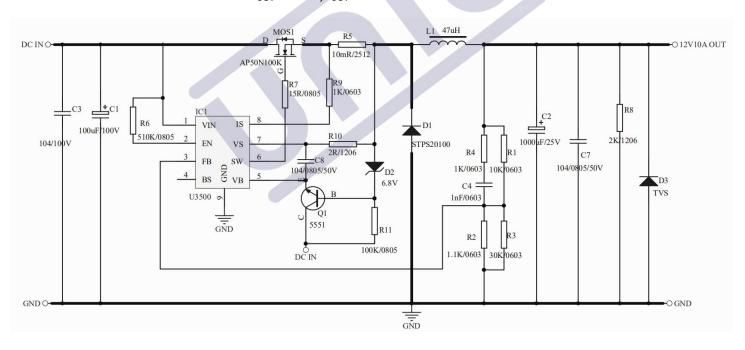

DC IN O →O 12V10A OUT 10mR/2512 AP50N100K DSM R9 1K/0603 R7 15R/0805 R8 D4 ES1D IS 100uF 100V VIN 2K 1206 EN STPS20100 VS 2R/1206 C8 2R/ 104/0805/50V FB SW R6 GND 1K/0603 10K/0603 104/0805/50V D_{D2} BS C4 = U3500 o 1nF/0603 GND 5551 R12 C5 R2 100K/0805 D5 5.1V 1.1K/0603 30K 0603 GND O--O GND


APP3: , V_{OUT} =12.5V, I_{OUT} =10A(Short-Circuit Shutdown and Off-delay Application)



U3500

Package Information

SOP-8 EP

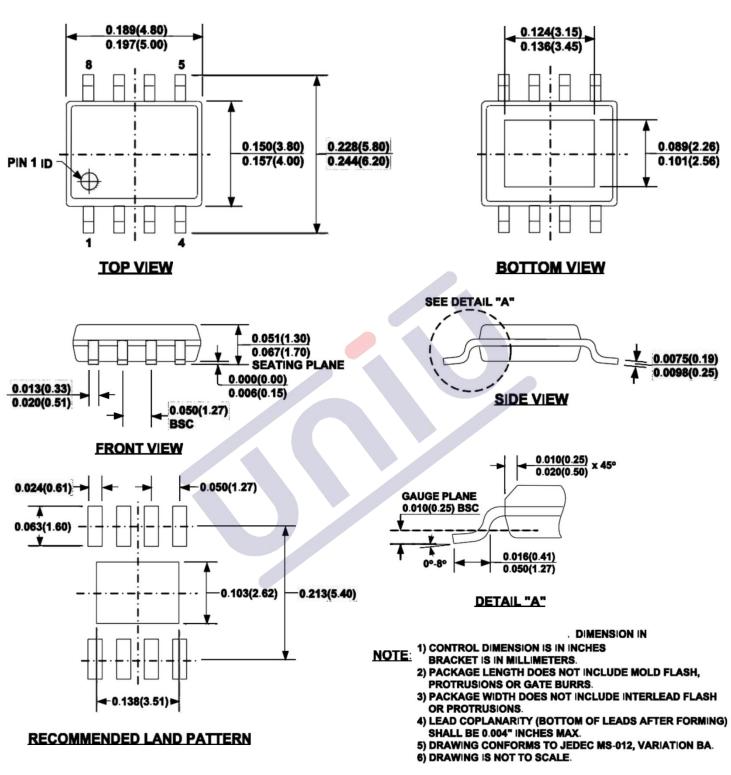

NOTICE:

The information in this document is subject to change without notice. Users should warrant and guarantee that third party Intellectual Property rights are not infringed upon when integrating UNI products into any application. UNI will not assume any legal responsibility for any said applications.



1.版本记录

DATE	REV.	DESCRIPTION
2018/04/ 19	1.0	First Release
2019/05/21	2.0	Package is changed SOP-8
2021/05/21	3.0	Package is changed to ESOP-8

2.免责声明

浙江宇力微新能源科技有限公司保留对本文档的更改和解释权力,不另行通知!产品不断提升,以追求高品质、稳定性强、可靠性高、环保、节能、高效为目标,我司将竭诚为客户提供性价比高的系统开发方案、技术支持等更优秀的服务。量产方案需使用方自行验证并自担所有批量风险责任。未经我司授权,该文件不得私自复制和修改。

版权所有 浙江宇力微新能源科技有限公司/绍兴宁力半导体有限公司

3.联系我们

浙江宇力微新能源科技有限公司

总部地址:绍兴市越城区斗门街道袍渎路25号中节能科创园45幢4/5楼

电话: 0575-85087896 (研发部)

传真: 0575-88125157

E-mail:htw@uni-semic.com

无锡地址: 江苏省无锡市锡山区先锋中路6号中国电子(无锡)数字芯城1#综合楼503室

电话:0510-85297939

E-mail:zh@uni-semic.com

深圳地址:深圳市宝安区西乡街道南昌社区宝源路泳辉国际商务大厦410

电话: 0755-84510976

E-mail:htw@uni-semic.com

